



Endure Linear 900  
Suspended Ceiling  
Installation Guide

# Rulon Suspended Endure Linear 900 Ceiling Installation Guide

---

## **Receipt and Storage:**

- a. All material shall be delivered to the project site in the original, labeled, unopened packages.
- b. Material shall be stored flat and level in a secured space, preferably in the room in which they are to be installed.
- c. Care in handling must be exercised to avoid damage.

## **Before You Begin Installation:**


- a. Ensure that all necessary tools are available (see below)
- b. Check Ceiling components to ensure all items required are at hand (see Page 2)
- c. Review this guide in its entirety.
- d. Review shop drawings if they are required for the installation.
- e. Some projects receive more than one length of material to optimize yield and minimize waste. Please be sure to check strip location on drawings.

## **If You Need Further Assistance:**

- If you have any questions, or if you encounter a situation not covered by this installation guide, contact the Rulon Engineering Department.  
Phone: (904-584-1400)

## **Tools and Equipment:**

- Standard leveling devices
- Hacksaw/Tin Snips
- Power miter saw w/ reversed fine tooth blade
- Fast acting adhesive
- (NOTE: Take care not to get Adhesive on Woodgrain)
- Standard Contractor's tools

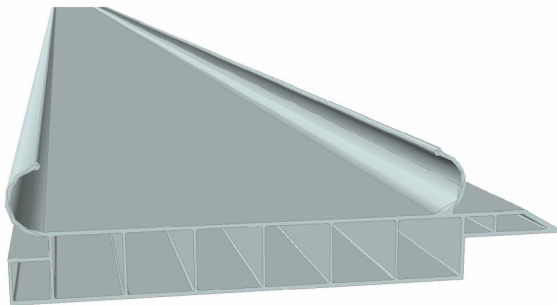

*Endure #900 Strip Shown*

## **Ceiling Components:**


### **Supplied by Rulon:**

- #900 Ceiling Strips
- #880 or #885 Carriers
- #890 or #895 Carrier Connectors
- #872 4" Floating Trim (optional)
- #850S Splicing Material
- #870 Perimeter Trim
- #875 Expansion Joint (if needed)

### **Supplied by others:**


- #12 Gauge Hanger Wire
- Hanger inserts
- Fasteners, as needed
- Acoustical Blanket  
(when specified)
- Fast Acting Adhesive
- Down Struts (As Required)

# Rulon Suspended Endure Linear 900 Ceiling Installation Guide

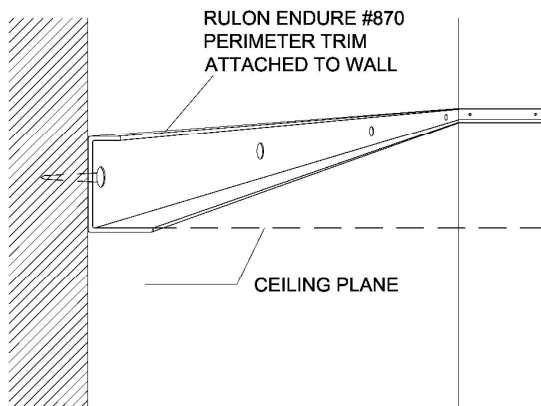


## **Step 1: Perimeter Installation**

Establish the ceiling height with laser, water-level, or other appropriate method. Mark location. Install #870 Perimeter Trim at ceiling height with appropriate fastener.

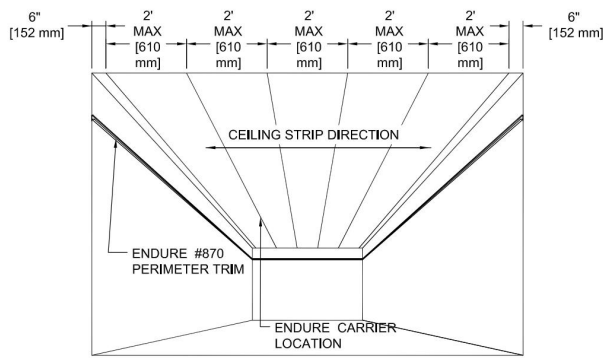

## **Step 2: Carrier Placement (Interior)**


Mark carrier locations as specified. Refer to Step 8 for Expansion Joint carrier placement (If required). Carriers spacing should not exceed 2' [610 mm] O.C. Spacing differs for exterior applications or special conditions such as pools or gymnasiums. (Refer to shop drawings or Rulon Engineering Department) Carriers shall be suspended starting 6" [152 mm] from one wall, and ending within 6" [152 mm] of the opposite wall. Carriers shall run perpendicular to the direction of the Endure ceiling strips.

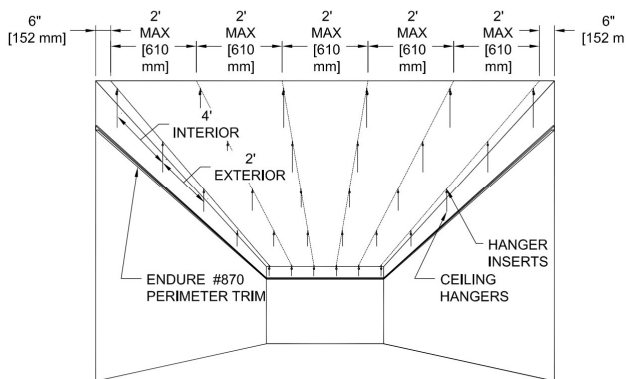

## **Step 3: Attaching Hangers (Interior)**


Install hanger inserts (i.e., screw eyes, star anchors, or eye pins shot or hammered into] structure or clips attached to beam flanges) at 4' [1219 mm] O.C. (Interior); 2' [610mm] O.C. (Exterior). Hang #12-Gauge wire hangers from the inserts. Hanger wires need to be hung directly from the building structure, unless otherwise covered in the Rulon shop drawings or reviewed and approved by the Rulon Engineering Department. Struts are also utilized on Exterior Ceilings.

# Rulon Suspended Endure Linear 900 Ceiling Installation Guide

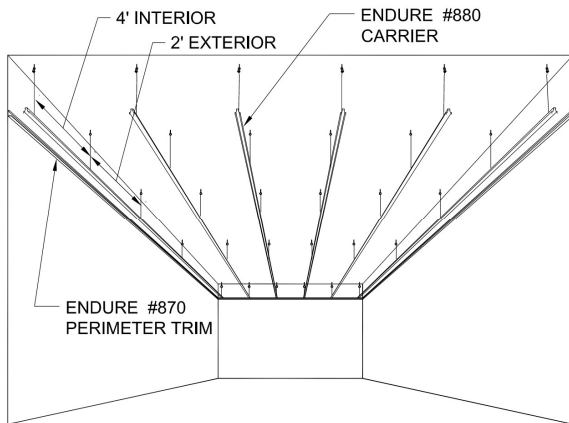



## Step 4: Carrier Suspension

Hang carriers from ceiling hangers. Level. Interior ceiling carriers are suspended by 12-Gauge Hanger wire on 4' centers along carrier (unless otherwise denoted on Rulon Shop Drawings)

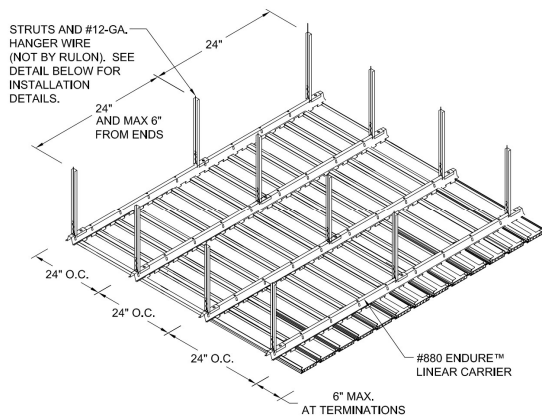


## Step 4E(Exterior):

For exterior ceiling such as soffits, drive-thrus, etc., wind uplift necessitates the use of down-struts in addition to hanger wire on maximum 2' centers along carrier. Call Rulon for any questions and refer to Rulon Shop Drawings if applicable. Configuration of suspension Subject to change for areas Requiring HVHZ Design Pressure. Customer to refer to local code and Reference custom shop drawings.

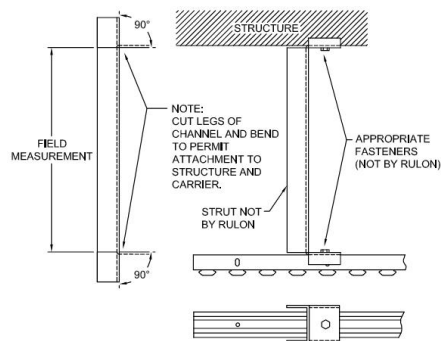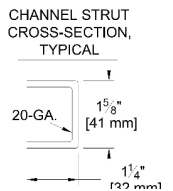

# Rulon Suspended Endure Linear 900 Ceiling Installation Guide

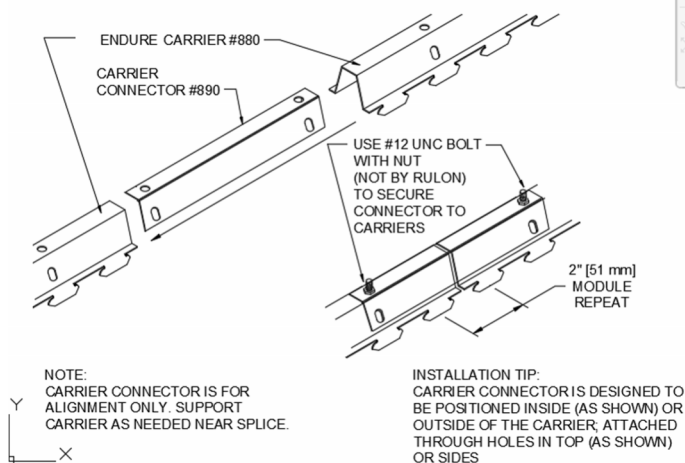


## Step 5: Extending Endure Carrier

At junctions between carriers, insert one #890 carrier connector. Attach carrier connector inside carriers as shown. Stagger locations of splice.

### Note:

Carrier connector is for alignment only. Support carrier as needed near splice.

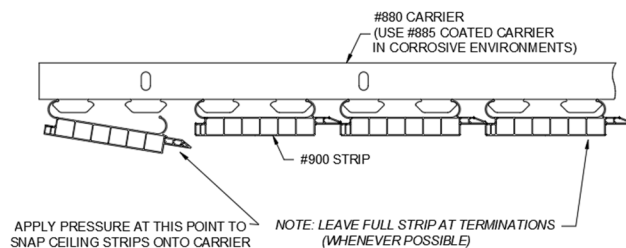

## Step 6: Ceiling Strip Attachment


Beginning at one wall, connect the #900 Ceiling Strips to the carrier, in sequence. If acoustical blankets are to be installed, they should be placed above the ceiling, as the installation progresses. Light cutouts should also be made as the ceiling is installed.

### Note:

It will be necessary to apply downward pressure to the ceiling carriers when snapping strips onto carrier.

## Step 7: Ceiling Strip Splices

When it is necessary to continue ceiling strips, align strip ends by placing a piece of #850S splice strip inverted, and centered, behind the #900 ceiling strips. This should be done when the strip is installed, prior to the installation of adjacent strips. Fast acting adhesive shall be used to secure the splice pieces. Ensure adhesive does not contact visible surfaces.

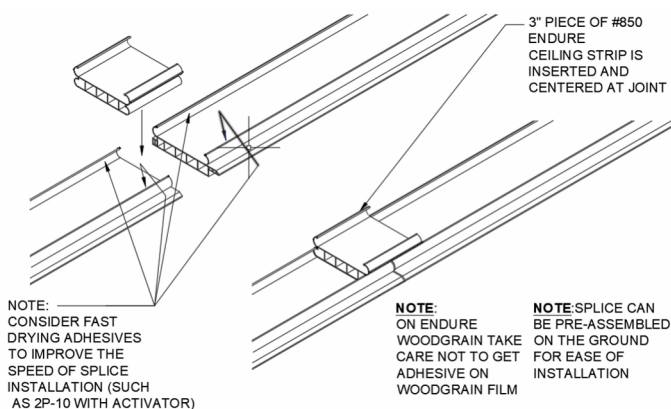

# Rulon Suspended Endure Linear 900 Ceiling Installation Guide



## Note:

Field cut all strips with a power miter saw. Use a fine-tooth blade for best results. Field check all strips (INCLUDING FULL LENGTH STRIPS) for a 90-degree cut end. Trim as necessary to ensure flush butt joints. For best results, overlap strips and cut at the same time before splicing two strips together.

## Step 8: Allowance for Expansion

Trim Endure strips at perimeter to allow for expansion and contraction.


Dimension 'A' varies between  $\frac{1}{4}$ " [6 mm] and  $\frac{1}{2}$ " [13 mm] for an 18' [5486 mm] long Endure ceiling, depending upon installation temperature. **Contact the Rulon Engineering Department for Clarification**

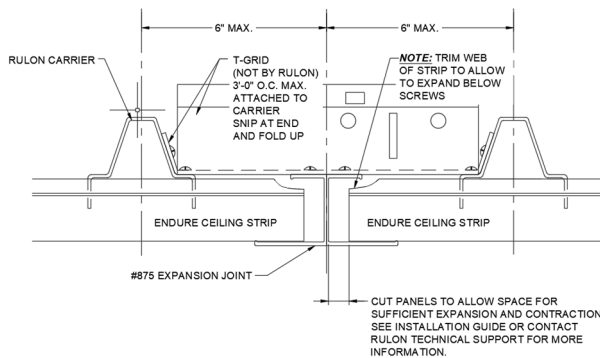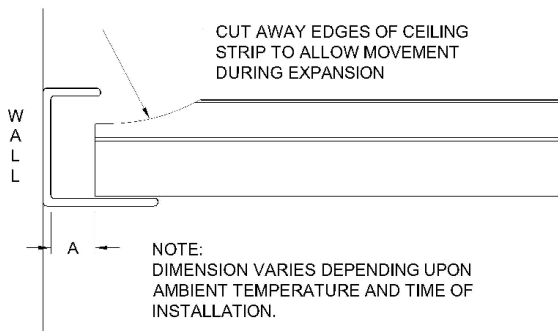

Please use Expansion Joints when required for exterior and pool applications. Please apply the same  $\frac{1}{4}$ " [6 mm] to  $\frac{1}{2}$ " [13 mm] space to allow for expansion and contraction.

# Rulon Suspended Endure Linear 900 Ceiling Installation Guide

---

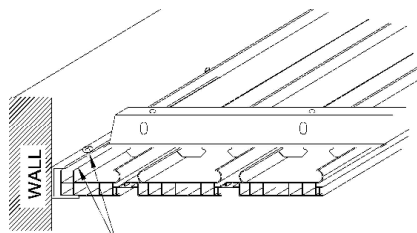


IF RIPPING OF A STRIP IS NECESSARY, WEDGE CUT-OFF PIECE INSIDE PERIMETER TRIM AND SECURE WITH SCREW (NOT BY RULON)

## **Step 9: Optional Ripping a Strip**

Care should be taken to complete a project with full strips, but if ripping a strip in the field becomes a necessity, refer to the detail to the left for how to secure the final strip.

#872 PERIMETER TRIM POSITIVELY ATTACHED TO STRIP WITH SCREW

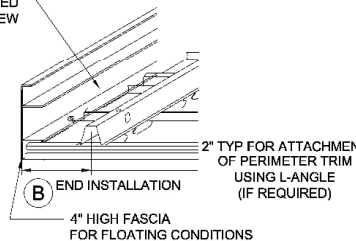

## **Step 10: Optional Floating Trim**

#872 Perimeter Trim may be used for floating conditions if specified. Please see detail to the left for installation. Trim furnished in nominal lengths for cutting to fit in field.

## **Last Step: Adjustment, Cleaning, and Repair**

- The contractor shall make final adjustments to level or contours
- Upon completions of the ceiling installation, the contractor shall clean all Endure strips and borders of dirt, dust, grease, oils, fingerprints, etc. using warm, soapy water – followed by a rinse.
- All work that cannot be successfully cleaned and repaired shall be removed & replaced.